

Anthony International Double Ballast Re-Wiring Instructions

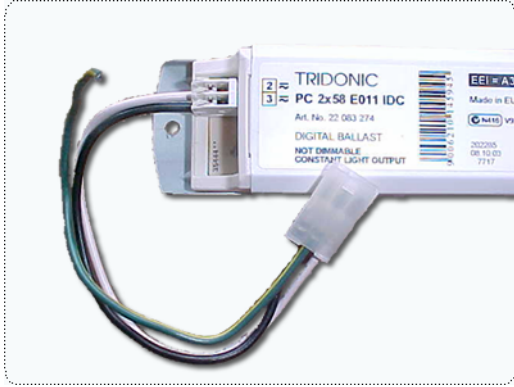


Figure 1

1. CUT WIRES FROM EXISTING BALLAST
2. BARE BACK WHITE WIRE & INSERT IN TO No.2
3. BARE BACK BLACK WIRE & INSERT IN TO No.3
4. GROUND EARTH WIRE TO FRAME

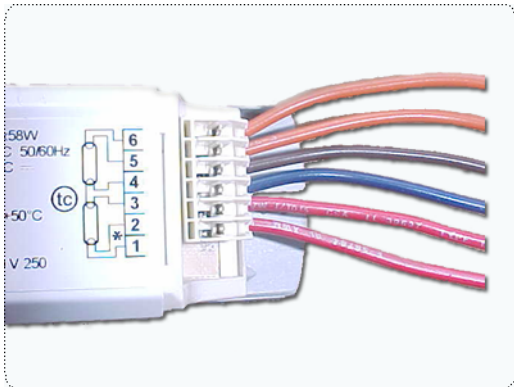


Figure 2

5. CUT WIRES FROM EXISTING BALLAST
6. BARE BACK BOTH ORANGE WIRES & INSERT IN TO No.6 & 5
7. BARE BACK BOTH RED WIRES & INSERT IN TO No.1 & 2
8. BARE BACK BOTH BROWN WIRES & INSERT IN TO ONE No.4 & THE OTHER IN TO CONNECTOR BLOCK
9. BARE BACK BOTH BLUE WIRES & INSERT ONE IN TO No.3 AND THE OTHER IN TO THE CONNECTOR BLOCK WITH BROWN

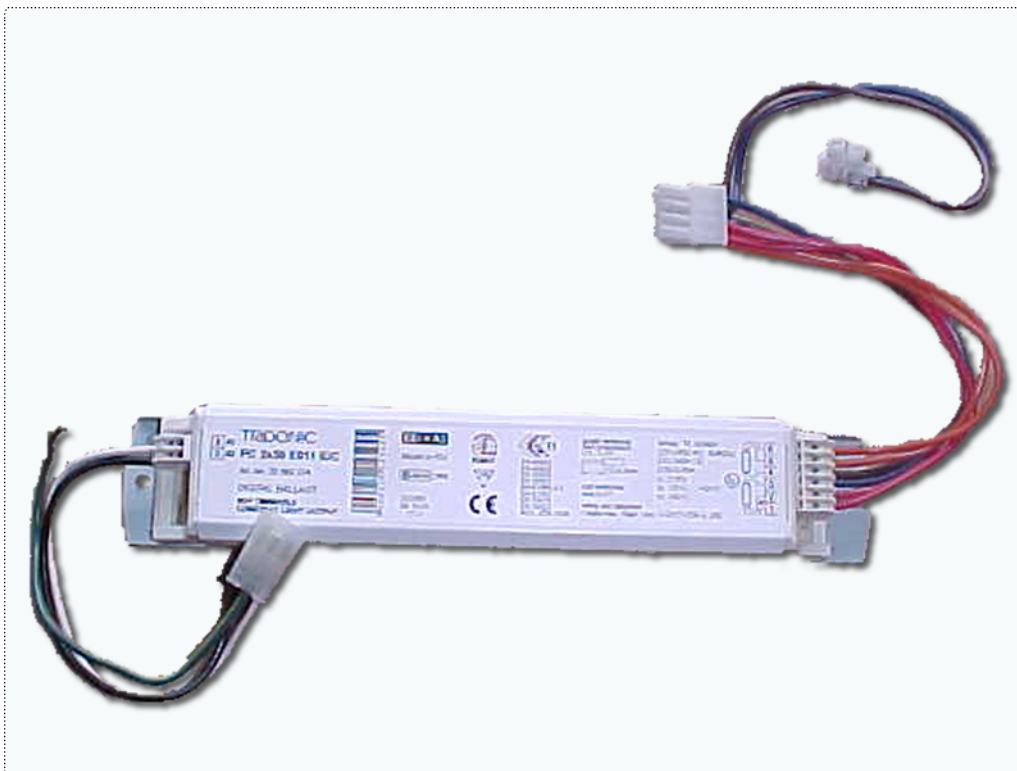


Figure 3