

Anthony International Single Ballast Re-Wiring Instructions

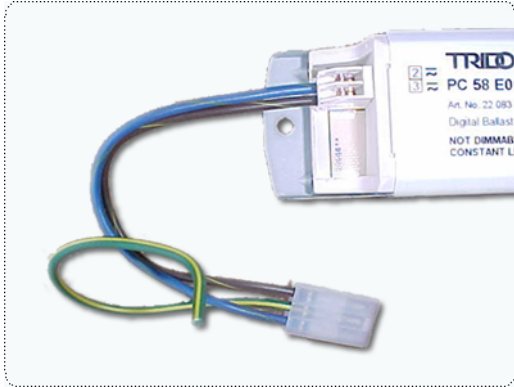


Figure 1

1. CUT WIRES FROM EXISTING BALLAST
2. BARE BACK BLUE WIRE & INSERT IN TO No.2
3. BARE BACK BROWN WIRE & INSERT IN TO No.3
4. GROUND EARTH WIRE TO FRAME

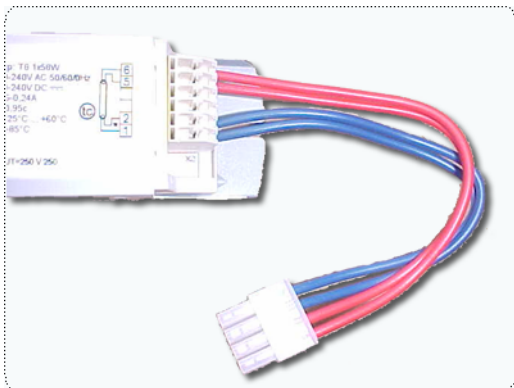


Figure 2

5. CUT WIRES FROM EXISTING BALLAST
6. BARE BACK BOTH RED WIRES & INSERT IN TO No.6 & 5
7. BARE BACK BOTH BLUE WIRES & INSERT IN TO No.1 & 2



Figure 3